



LS 6000i Series



Product Reference Guide



LS 6000i Series
Product Reference Guide

72-51596-01

Revision A

July 2001



© 2001 by Symbol Technologies, Inc. All rights reserved.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission in writing from Symbol. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an “as is” basis. All software, including firmware, furnished to the user is on a licensed basis. Symbol grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Symbol. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Symbol. The user agrees to maintain Symbol’s copyright notice on the licensed programs delivered hereunder, and to include the same on any authorized copies it makes, in whole or in part. The user agrees not to decompile, disassemble, decode, or reverse engineer any licensed program delivered to the user or any portion thereof.

Symbol reserves the right to make changes to any software or product to improve reliability, function, or design.

Symbol does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any Symbol Technologies, Inc., intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Symbol products.

Symbol, Spectrum One, and Spectrum24 are registered trademarks of Symbol Technologies, Inc. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, New York 11742-1300
<http://www.symbol.com>



Contents

About This Guide

Chapter Descriptions	ix
Notational Conventions	x
Related Publications	x
Service Information	xi
Symbol Support Center	xii
Warranty	xvi
Warranty Coverage and Procedure	xvii
General	xviii

Chapter 1. Introduction

Overview	1-1
Using Your Scanner	1-3

Chapter 2. Setup

Unpacking	2-1
Installing the Scanner Cable	2-1
Switching Cables	2-2
Electronic Article Surveillance (EAS) (Optional)	2-3



Connecting to a Host 2-3

Chapter 3. Scanning

Scanning In Hand-Held Mode 3-1
Scanning in Hands-Free (Presentation) Mode 3-3
Selecting Beeper Volume 3-5
Beeper Indications 3-6
LED Indications 3-7

Chapter 4. Maintenance and Specifications

Maintaining Your Scanner 4-1
Scan Zone 4-2
Technical Specifications 4-3
Troubleshooting 4-5

Chapter 5. Programming

Operational Parameters 5-1
 Defaults 5-2
Set Default Parameter 5-10
Host Type 5-11
 IBM 46XX Host Types (LS 6005i) 5-11
 RS-232C Host Types (LS 6004i) 5-13
 USB (LS 6007i) 5-41
Trigger Mode 5-54
Time to Return to Continuous Omnidirectional 5-56
Beeper Volume 5-57
Beeper Frequency 5-59
Time-out Between Decodes, Same Symbol 5-61
Time-out Between Decodes, Different Symbols 5-62
Laser On Time 5-63

Rest Mode Time-out	5-64
Beep After Good Decode	5-66
Linear Code Type Security Level	5-67
Linear Security Level 1	5-67
Linear Security Level 2	5-68
Linear Security Level 3	5-69
Linear Security Level 4	5-69
UPC/EAN Options	5-71
Enable/Disable UPC-E	5-71
Enable/Disable UPC-A	5-72
Enable/Disable EAN-8	5-73
Enable/Disable EAN-13	5-74
Enable/Disable Bookland EAN	5-75
Decode UPC/EAN Supplementals	5-76
Decode UPC/EAN Supplemental Redundancy	5-78
Transmit UPC-A Check Digit	5-79
Transmit UPC-E Check Digit	5-80
Random Weight Check Digit	5-81
UPC-A Preamble	5-82
UPC-E Preamble	5-84
Convert UPC-E to UPC-A	5-86
EAN Zero Extend	5-87
UPC/EAN Predecode Block	5-88
UPC/EAN Security Level	5-90
Linear UPC/EAN Decode	5-93
Linear Supplemental Decode	5-94
UPC/EAN Decode Performance	5-95
UPC/EAN Coupon Code	5-97
Code 128 Options	5-98
Enable/Disable Code 128	5-98
Code 128 Decode Performance	5-99
Enable/Disable UCC/EAN-128	5-101



LS 6000i Series Product Reference Guide

Code 39 Options	5-102
Enable/Disable Code 39	5-102
Set Lengths for Code 39	5-103
Code 39 Check Digit Verification	5-106
Transmit Code 39 Check Digit	5-107
Code 39 Decode Performance	5-108
Enable/Disable Code 39 Full ASCII	5-110
Interleaved 2 of 5 Options	5-112
Enable/Disable Interleaved 2 of 5	5-112
Set Lengths for Interleaved 2 of 5	5-113
I 2 of 5 Check Digit Verification	5-116
Transmit I 2 of 5 Check Digit	5-118
Convert I 2 of 5 to EAN-13	5-119
Codabar Options	5-120
Enable/Disable Codabar	5-120
Set Lengths for Codabar	5-121
CLSI Editing	5-124
NOTIS Editing	5-125
RSS Codes	5-126
RSS-14	5-126
RSS-Limited	5-127
RSS-Expanded	5-128
Transmit Code ID Character	5-129
Pause Duration	5-132
Prefix/Suffix Values	5-133
Scan Data Transmission Format	5-134
Numeric Bar Codes	5-138
Cancel	5-143

Appendix A. Programming Reference

UCC/EAN-128	A-1
AIM Code Identifiers	A-4

Modifier Characters A-5
ASCII Character Set A-9

Tell Us What You Think...



LS 6000i Series Product Reference Guide



About This Guide

The *LS 6000i Series Product Reference Guide* provides general information about connection and operation of the LS 6000i scanner series.

Chapter Descriptions

Following are brief descriptions of each chapter in this guide.

- [Chapter 1, *Introduction*](#) provides a product overview and a brief description on using the scanner.
- [Chapter 2, *Setup*](#) provides information on connecting the scanner to the host.
- [Chapter 3, *Scanning*](#) describes how to use the scanner and defines operator feedback.
- [Chapter 4, *Maintenance and Specifications*](#) includes tips on properly maintaining your



scanner, and technical specifications of the scanner.

- [Chapter 5, Programming](#) provides all the bar codes necessary to program your scanner.
- [Appendix A, Programming Reference](#) contains useful reference material such as ASCII tables and AIM code identifiers.

Notational Conventions

The following conventions are used in this document:

- The term “LS 6000i” applies to the LS 6000i, LS 6004i, LS 6005i and LS 6007i, except where specifically noted.
- Bullets (•) indicate:
 - action items
 - lists of alternatives
 - lists of required steps that are not necessarily sequential
- Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

Related Publications

The following is a list of documents that you may find useful if you want to know more about the LS 6000i Scanner.

- *LS 6000 Series Quick Reference Guide*
p/n 70-33187-XX
- *Symbol Omnidirectional Scanner Advanced Programmer's Guide*
p/n 70-15600-XX

Service Information

If you have a problem with your equipment, contact the [Symbol Support Center](#) for your region. See [page xii](#) for contact information. Before calling, have the model number, serial number, and several of your bar code symbols at hand.

Call the Support Center from a phone near the scanning equipment so that the service person can try to talk you through your problem. If the equipment is found to be working properly and the problem is symbol readability, the Support Center will request samples of your bar codes for analysis at our plant.

If your problem cannot be solved over the phone, you may need to return your equipment for servicing. If that is necessary, you will be given specific directions.

Note: *Symbol Technologies is not responsible for any damages incurred during shipment if the approved shipping container is*



not used. Shipping the units improperly can possibly void the warranty. If the original shipping container was not kept, contact Symbol to have another sent to you.

Symbol Support Center

For service information, warranty information or technical assistance contact or call the Symbol Support Center in:

United States

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, New York 11742-1300
1-800-653-5350

Canada

Symbol Technologies Canada, Inc.
2540 Matheson Boulevard East
Mississauga, Ontario, Canada L4W 4Z2
905-629-7226

United Kingdom

Symbol Technologies
Symbol Place
Winnersh Triangle, Berkshire
RG41 5TP
United Kingdom
0800 328 2424 (Inside UK)
+44 208 945 7529 (Outside UK)

Asia/Pacific

Symbol Technologies Asia, Inc.
230 Victoria Street #04-05
Bugis Junction Office Tower
Singapore 188024
337-6588 (Inside Singapore)
+65-337-6588 (Outside Singapore)

Australia

Symbol Technologies Pty.
Ltd.
432 St. Kilda Road
Melbourne, Victoria 3004
1-800-672-906 (Inside
Australia)
+61-3-9866-6044 (Outside
Australia)

Denmark

Symbol Technologies AS
Gydevang 2,
DK-3450 Allerod, Denmark
7020-1718 (Inside Denmark)
+45-7020-1718 (Outside
Denmark)

Finland

Oy Symbol Technologies
Kaupintie 8 A 6
FIN-00440 Helsinki, Finland
9 5407 580 (Inside Finland)
+358 9 5407 580 (Outside
Finland)

Austria

Symbol Technologies Austria GmbH
Prinz-Eugen Strasse 70
Suite 3
2.Haus, 5.Stock
1040 Vienna, Austria
1-505-5794 (Inside Austria)
+43-1-505-5794 (Outside Austria)

Europe/Mid-East Distributor Operations

Contact your local distributor or call
+44 208 945 7360

France

Symbol Technologies France
Centre d'Affaire d'Antony
3 Rue de la Renaissance
92184 Antony Cedex, France
01-40-96-52-21 (Inside France)
+33-1-40-96-52-50 (Outside
France)



LS 6000i Series Product Reference Guide

Germany

Symbol Technologies GmbH
Waldstrasse 68
D-63128 Dietzenbach,
Germany
6074-49020 (Inside
Germany)
+49-6074-49020 (Outside
Germany)

Latin America Sales Support

7900 Glades Road
Suite 340
Boca Raton, Florida 33434
USA
1-800-347-0178 (Inside
United States)
+1-561-483-1275 (Outside
United States)

Netherlands

Symbol Technologies
Kerkplein 2, 7051 CX
Postbus 24 7050 AA
Varsseveld, Netherlands
315-271700 (Inside
Netherlands)
+31-315-271700 (Outside
Netherlands)

Italy

Symbol Technologies Italia S.R.L.
Via Cristoforo Colombo, 49
20090 Trezzano S/N Naviglio
Milano, Italy
2-484441 (Inside Italy)
+39-02-484441 (Outside Italy)

Mexico

Symbol Technologies Mexico Ltd.
Torre Picasso
Boulevard Manuel Avila Camacho
No 88
Lomas de Chapultepec CP 11000
Mexico City, DF, Mexico
5-520-1835 (Inside Mexico)
+52-5-520-1835 (Outside Mexico)

Norway

Symbol Technologies
Trollasveien 36
Postboks 72
1414 Trollasen, Norway
66810600 (Inside Norway)
+47-66810600 (Outside Norway)

South Africa

Symbol Technologies Africa
Inc.
Block B2
Rutherford Estate
1 Scott Street
Waverly 2090 Johannesburg
Republic of South Africa
11-4405668 (Inside South
Africa)
+27-11-4405668 (Outside
South Africa)

Spain

Symbol Technologies S.A.
Edificio la Piovera Azul
C. Peonias, No. 2 - Sexta Planta
28042 Madrid, Spain
9-1-320-39-09 (Inside Spain)
+34-9-1-320-39-09 (Outside Spain)

Sweden

Symbol Technologies AB
Albygatan 109D
Solna
Sweden
84452900 (Inside Sweden)
+46 84452900 (Outside
Sweden)

If you purchased your Symbol product from a Symbol Business Partner, contact that Business Partner for service.



Warranty

Symbol Technologies, Inc (“Symbol”) manufactures its hardware products in accordance with industry-standard practices. Symbol warrants that for a period of twelve (12) months from date of shipment, products will be free from defects in materials and workmanship.

This warranty is provided to the original owner only and is not transferable to any third party. It shall not apply to any product (i) which has been repaired or altered unless done or approved by Symbol, (ii) which has not been maintained in accordance with any operating or handling instructions supplied by Symbol, (iii) which has been subjected to unusual physical or electrical stress, misuse, abuse, power shortage, negligence or accident or (iv) which has been used other than in accordance with the product operating and handling instructions. Preventive maintenance is the responsibility of customer and is not covered under this warranty.

Wear items and accessories having a Symbol serial number, will carry a 90-day limited warranty. Non-serialized items will carry a 30-day limited warranty.

Warranty Coverage and Procedure

During the warranty period, Symbol will repair or replace defective products returned to Symbol's manufacturing plant in the US. For warranty service in North America, call the Symbol Support Center at 1-800-653-5350. International customers should contact the local Symbol office or support center. If warranty service is required, Symbol will issue a Return Material Authorization Number. Products must be shipped in the original or comparable packaging, shipping and insurance charges prepaid. Symbol will ship the repaired or replacement product freight and insurance prepaid in North America. Shipments from the US or other locations will be made F.O.B. Symbol's manufacturing plant.

Symbol will use new or refurbished parts at its discretion and will own all parts removed from repaired products. Customer will pay for the replacement product in case it does not return the replaced product to Symbol within 3 days of receipt of the replacement product. The process for return and customer's charges will be in accordance with Symbol's Exchange Policy in effect at the time of the exchange.

Customer accepts full responsibility for its software and data including the appropriate backup thereof.

Repair or replacement of a product during warranty will not extend the original warranty term.

Symbol's Customer Service organization offers an array of service plans, such as on-site, depot, or phone support, that can be implemented to meet customer's special operational requirements and are available at a substantial discount during warranty period.



General

Except for the warranties stated above, Symbol disclaims all warranties, express or implied, on products furnished hereunder, including without limitation implied warranties of merchantability and fitness for a particular purpose. The stated express warranties are in lieu of all obligations or liabilities on part of Symbol for damages, including without limitation, special, indirect, or consequential damages arising out of or in connection with the use or performance of the product.

Seller's liability for damages to buyer or others resulting from the use of any product, shall in no way exceed the purchase price of said product, except in instances of injury to persons or property.

Some states (or jurisdictions) do not allow the exclusion or limitation of incidental or consequential damages, so the proceeding exclusion or limitation may not apply to you.



Chapter 1

Introduction

Overview

Symbol Technologies' LS 6000i scanner combines the benefits of omni-directional scanning with a light-weight, hand-held design. The scanner converts easily to hands-free use with an optional presentation stand.

The LS 6000i successfully reads most code symbologies, densities, and colors, produced by a wide range of printing techniques.

The LS 6000i scanner supports the following interfaces:

- LS 6004i-I000 (RS-232C) - This scanner contains on-board discrete RS-232C communications for connecting to RS-232C asynchronous terminals and host systems. It also accommodates any of the Synapse™



“Smart Cables” which allows you to connect to a wide variety of host systems.

- LS 6004i-I090 (RS-232C with EAS) - This variation of the LS 6004 also supports Checkpoint Electronic Article Surveillance (EAS) modes V and VII.
- LS 6005i-I000 (IBM 468X/469X) - The LS 6005 is fully compatible with the entire line of IBM 468X/469X terminals. It also accommodates the full line of Synapse Smart Cables.
- LS 6005i-I090 (IBM 468X/469X with EAS) - The LS 6005i-I090 also provides additional signal lines for EAS deactivation (Checkpoint modes V and VII).
- LS 6007i-I000 (USB) connects to USB-capable host systems, including:
 - Desktop PCs and Notebooks
 - Apple™ iMac, G4, iBooks
 - IBM SurePOS terminals
 - Network computers.It also accommodates Synapse Smart Cables.
- LS 6007i-I090 (USB with EAS) provides additional signal lines for EAS deactivation (Checkpoint VII).

Using Your Scanner

If the scanner is powered by the host, ensure the host is connected to a power outlet. When power is applied to the host, the scanner powers up.

If the scanner is powered by an external power supply, ensure the power supply is connected to a power outlet. When the power supply is connected to the scanner, the scanner powers up.

The green LED on top of the scanner illuminates and 3 power-up beeps sound, indicating the scanner is operational.

The LS 6000i's LED and beeper indicate scanning activity. These indications are described in [LED Indications](#) and [Beeper Indications](#) on page 3-6.

If the scanner is inactive for more than a pre-programmed length of time, it enters a low power “rest” mode to conserve energy. When you need to scan again, just bring a bar code to the scanner window to “wake up” the scanner.



LS 6000i Series Product Reference Guide



Chapter 2 Setup

Unpacking

Remove the scanner from its packing and inspect it for damage. If the scanner was damaged in transit, call the [Symbol Support Center](#) at one of the telephone numbers listed on page xii. KEEP THE PACKING. It is the approved shipping container and should be used if you ever need to return your equipment for servicing.

Installing the Scanner Cable

To connect the cable to the LS 6000i scanner:

1. Switch off all devices connected to the LS 6000i cable.



2. Plug the modular connector on the cable into the receptacle in the bottom of the LS 6000i handle. Listen for a click.

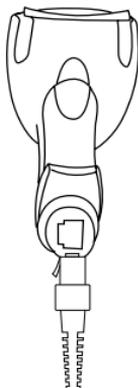


Figure 2-1. Plugging Connector into Scanner

3. Gently tug the cable to ensure the connector is properly secured.

Switching Cables

Different cables are required for different hosts. To change the scanner cable:

1. Unplug the installed cable's modular connector by depressing the connector clip with a screwdriver or paper clip (through the access hole).
2. Carefully slide out the cable.

3. Follow the steps for *Installing the Scanner Cable* above to connect a new cable.

Electronic Article Surveillance (EAS) (Optional)

Because there are several Checkpoint EAS systems available, your local Checkpoint representative must install the EAS cable. To contact your local Checkpoint representative inside the U.S. call 800-257-5540, ext. 4900. Outside the U.S., call (609) 848-1800, ext. 4900.

If you are using an EAS cable, refer to the Universal Cable EAS Installation Sheet (Symbol p/n 70-32824-XX).

Connecting to a Host

Following are detailed instructions for connecting the LS 6000i to your host.

1. Power down the host terminal.
2. Connect the interface cable to the host terminal (refer to your terminal manual to locate the correct port).
3. If necessary, plug the power supply into the power jack on the interface cable. Depending on the cable, this is located either on the cable's connector itself, or on a "lump" on the cable.



4. Plug the other end of the power supply into an AC outlet.
5. Connect the other end of the interface cable to the scanner.

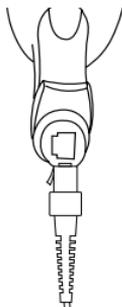


Figure 2-2. Plugging Connector into Scanner

6. Set the LS 6000i to communicate with your particular POS terminal by scanning the appropriate bar code(s). Depending on your terminal, these are located either in [Chapter 5, Programming](#), or the **Synapse Interface Guide**.
7. Power up the host terminal. Ensure that the scanner driver port is enabled by following the terminal instructions.
8. Verify that the scanner is successfully reading bar codes and transmitting their content to the host terminal.

See [Troubleshooting](#) on page 4-5 if you are having problems after completing these steps.



Chapter 3

Scanning

Scanning In Hand-Held Mode

The LS 6000i may be placed on the counter-top or in the Desk Mount Stand (optional). The scanner operates in one of the following three trigger modes, programmable by the bar codes in *Trigger Mode* on page 5-54:

- **Combination Mode** (Default)
The omnidirectional scan pattern is always on and ready to decode. When the trigger is pulled, the scanner emits a single scan line to decode, then reverts back to omnidirectional constant-on. This mode is only for hand-held use.
- **Triggered Omnidirectional Mode**
An omnidirectional scan pattern activates upon trigger pull.



- **Triggered Single Scan Line Mode**

A single scan line appears upon trigger pull.


To scan in hand-held mode, pick up the scanner and hold it within the scanning range for the bar code. If the scanner is in the constant-on mode, it decodes the bar code automatically. If the scanner is in a triggered mode, pull the trigger to activate the scan pattern and decode the bar code.



Figure 3-1. Holding the Scanner

Scanning in Hands-Free (Presentation) Mode

To place the LS 6000i scanner in the optional Hands-Free Presentation Stand, slide the rubber “chin” support on the scanner into the notch in the stand until the scanner is firmly seated. The scanner emits a constant omnidirectional pattern. To scan a bar code, bring the bar code anywhere within 10 in. (25.4 cm) of the scanner window for a successful decode. Bar codes can either be directed in toward the nose of the scanner (“presentation” scanning) or from side to side in a sweeping motion (“swipe” scanning).

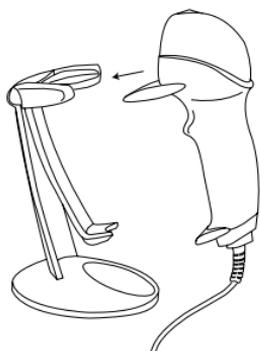

Inserting LS 6000i into Stand



Scanning in the Stand

Figure 3-2. Inserting the Scanner into Stand and Scanning



LS 6000i Series Product Reference Guide

When the LS 6000i is removed from the Presentation Stand, the scanner operates in the programmed trigger mode (see [Scanning In Hand-Held Mode](#) on page 3-1 for trigger mode descriptions).

Selecting Beeper Volume

The LS 6000i emits a short beep when it successfully reads a bar code. There are three volume settings for this decode beep. To change the setting, scan the programming bar codes for *Beeper Volume* on page 5-57.

To adjust the frequency (tone) of the scanner's beeper, see *Beeper Frequency* on page 5-59.



Beeper Indications

The beeper indicates the scanner's status as follows:

Table 3-1. Beeper Indications

Beeper	Indication
3 Beeps	Power up (or reset) has occurred.
1 Beep	A bar code has been successfully decoded.
4 Beeps	A transmission error has occurred. Bar code data was not received by the host.
Fast warble	A programming parameter was entered successfully.

LED Indications


The green LED located on top of the scanner indicates the operational status of the scanner. These LED indications are defined below:

Table 3-2. LED Indications

LED	Indication
Off	No power is applied to the scanner.
On steady	The scanner is on and “ready to scan,” or a flash download cable is attached.
Momentary flash off	A bar code has been successfully decoded.
Fast double-blinking	The scanner is in a programming sequence.
Fast sequential flashing	A scanner malfunction has occurred.
Slow steady blinking	The scanner is in flash program mode.



LS 6000i Series Product Reference Guide

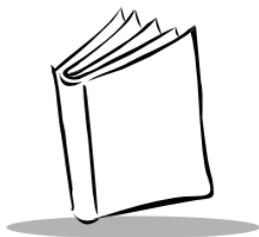

Chapter 4

Maintenance and Specifications

Maintaining Your Scanner


The only maintenance your LS 6000i scanner requires is an occasional cleaning of the scan window to remove fingerprints or other debris. Since the LS 6000i scan window is a high performance optical element, care should be given during cleaning.

Use only a mild soap and water solution applied to a soft, clean cloth (NOT directly to the scan window). Buff the scan window gently with the cloth to remove any streaking.



Scan Zone

When an omnidirectional mode is selected, the LS 6000i scanner emits a 20-line scan pattern designed to allow you to read bar codes, even very long and narrow ones, easily from almost any angle. The scan pattern is projected directly out of the scan window creating the three dimensional “scan zone” shown below. To read a bar code, present the bar code within this pattern.

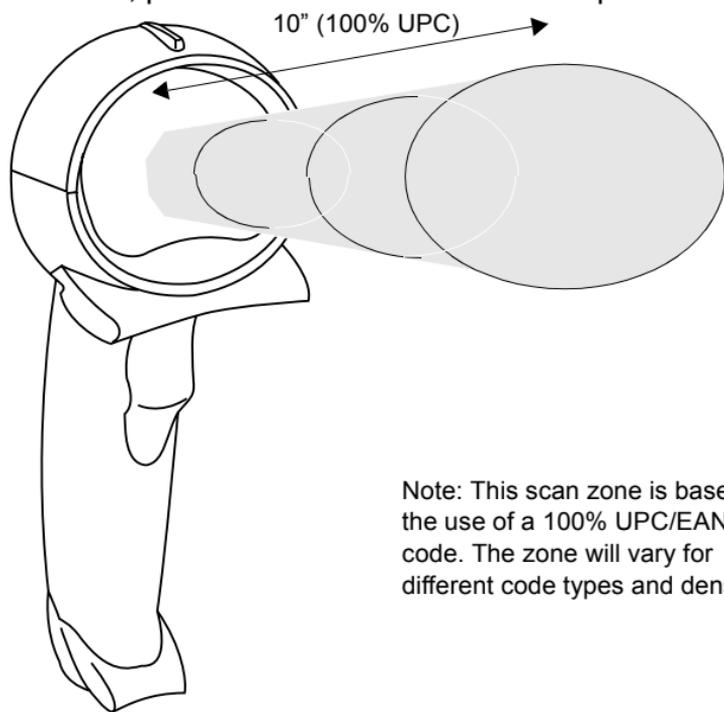

Note: This scan zone is based on the use of a 100% UPC/EAN bar code. The zone will vary for different code types and densities.

Figure 4-1. LS 6000i Scan Zone

Technical Specifications

Table 4-1. Technical Specifications

Item	Description
Power Requirements	5.2 VDC +/- 5% @400mA
Omnidirectional Scan Pattern	20-line, 5-direction dynamic cross pattern; 1200 scans per second
Single-Line Scan Pattern	60 scans per second
Decode Depth of Field	Maximum working distance is 10 in. (25.4 cm) on 100% UPC/EAN symbol
Decode Capability	UPC/EAN/JAN (with and without supplementals), Code 128, Code 39, Interleaved 2 of 5, Codabar, UCC/EAN 128, Bookland EAN, RSS-14, RSS Limited, RSS Expanded
Durability	4 ft. (1.2 meter) drops to concrete
Operating Temperature	32° to 104°F (0° to 40°C)
Storage Temperature	-40° to 140°F (-40° to 60°C)
Humidity	5% to 95% non-condensing



Table 4-1. Technical Specifications (Continued)

Item	Description
Ambient Light	Immune to normal artificial indoor and natural outdoor (direct sunlight) lighting conditions Flourescent, incandescent, mercury vapor, sodium vapor: 450 ft.-candles Sunlight: 9000 ft.-candles
Weight	7.4 oz. (210 gm)
Height	7.64 in. (194 mm)
Width	2.72 in. (69 mm)
Depth	3.19 in. (81 mm)

Troubleshooting

Table 4-2. Troubleshooting

Problem	Solution
The scanner is not decoding and the green LED is not lit?	Refer to Chapter 2, Setup to verify that your scanner is properly connected.
The scanner is not decoding and the green LED is lit?	Check the bar code to make sure it is not defaced. Verify that the code type you are scanning is enabled. Verify that the symbol length for that code type is correct. Try scanning similar bar codes of the same code type. Make sure the Beep After Good Decode parameter is enabled. Make sure a flash download cable is not being used.



Table 4-2. Troubleshooting (Continued)

Problem	Solution
The scanner is not transmitting to the host terminal?	Make sure the scanner is connected to the terminal. Make sure the host terminal is properly configured. Be sure that you've scanned the proper host type. If you're using RS-232, be sure all RS-232 parameters (e.g., baud rate, data bits, handshaking) are set properly to communicate with the host.



Chapter 5

Programming

Operational Parameters

The LS 6000i is shipped with the settings shown in the [Table 5-1 beginning on page 5-2](#). These default values are stored in non-volatile memory and are preserved even when the scanner is powered down. You can change these default values by scanning the appropriate bar codes included in this manual. These new values replace the standard default values in memory. The default parameter values can be recalled by scanning the [SET ALL DEFAULTS bar code on page 5-10](#).

If you are using a Synapse cable, your host is autodetected, so no host bar codes need to be scanned. If not, you must select a terminal type even if the default parameters suit your needs. The scanner automatically



identifies the host type on power-up. It makes this determination provided the host is powered-up before the scanner is attached to it. You must then select the appropriate terminal type for that host. For example, if the scanner is connected to an IBM 4683, after you hear the power-up beeps, select the proper port from the choices in [IBM 46XX Host Types \(LS 6005i\) on page 5-11](#).

Defaults

The following table lists the defaults for all parameters. If you wish to change any option, scan the appropriate bar code(s).

Table 5-1. Default Table

Parameter	Default	Page Number
Set Default Parameter	All Defaults	5-10
Host Type	See page 5-11	5-11
IBM 46XX (LS 6005i)	--	5-11
RS-232C (LS 6004i)	--	5-13
Baud Rate	9600	5-19
Parity	Even	5-23
Check Receive Errors	Check	5-26

Table 5-1. Default Table (Continued)

Parameter	Default	Page Number
Hardware Handshaking	None	5-27
Software Handshaking	None	5-31
Host Serial Response Time-out	2 Sec.	5-35
RTS Line State	Low	5-36
Stop Bit Select	1	5-37
ASCII Format	8-Bit	5-38
Beep on <BEL>	Disable	5-39
Intercharacter Delay	0	5-40
USB (LS 6007i)	--	5-41
Set USB Defaults	--	5-41
USB Device Type	IBM Hand-Held USB	5-41
Country Selection	North American, Standard	5-45
Keystroke Delay	No Delay (0 ms)	5-51



Table 5-1. Default Table (Continued)

Parameter	Default	Page Number
CAPS LOCK	Disable	5-52
Ignore Unknown Characters	Send Bar Codes with Unknown Characters	5-53
Trigger Mode	Triggered Omnidirectional	5-54
Time to Return to Continuous Omnidirectional	0.5 seconds	5-56
Beeper Volume	High	5-57
Beeper Frequency	High Frequency	5-59
Time-out Between Decodes, Same Symbol	Triggered: 200 msec; Constant-On: 600 msec	5-61
Time-out Between Decodes, Different Symbols	400 msec	5-62
Laser On Time	2.0 seconds	5-63
Rest Mode Timeout	30 minutes	5-64
Beep After Good Decode	Enable	5-66

Table 5-1. Default Table (Continued)

Parameter	Default	Page Number
Linear Code Type Security Levels	2	5-67
UPC/EAN		
UPC-A	Enable	5-71
UPC-E	Enable	5-71
EAN-8	Enable	5-73
EAN-13	Enable	5-73
Bookland EAN	Disable	5-75
Decode UPC/EAN Supplementals	Ignore	5-76
Decode UPC/EAN Supplemental Redundancy	20	5-78
Transmit UPC-A Check Digit	Enable	5-79
Transmit UPC-E Check Digit	Enable	5-80



Table 5-1. Default Table (Continued)

Parameter	Default	Page Number
Random Weight Check Digit	Disable	5-81
UPC-A Preamble	System Character	5-82
UPC-E Preamble	System Character	5-84
Convert UPC-E to A	Disable	5-86
EAN-8 Zero Extend	Disable	5-87
UPC/EAN Predecode Block	Reject	5-88
UPC/EAN Security Levels	0	5-90
Linear UPC/EAN Decode	Disable	5-93
Linear Supplemental Decode	Disable	5-94
UPC/EAN Decode Performance	Enable, Level 3	5-95
UPC/EAN Coupon Code	Disable	5-97

Table 5-1. Default Table (Continued)

Parameter	Default	Page Number
Code 128		
Code 128	Enable	5-98
Code 128 Decode Performance	Enable, Level 3	5-99
UCC/EAN-128	Enable	5-101
Code 39		
Code 39	Enable	5-102
Set Length(s) for Code 39	1 to 55	5-103
Code 39 Check Digit Verification	Disable	5-106
Transmit Code 39 Check Digit	Disable	5-107
Code 39 Decode Performance	Enable, Level 3	5-108
Code 39 Full ASCII Conversion	Disable	5-110



Table 5-1. Default Table (Continued)

Parameter	Default	Page Number
Interleaved 2 of 5		
Interleaved 2 of 5	Disable	5-112
Set Length(s) for I 2 of 5	14	5-113
I 2 of 5 Check Digit Verification	Disable	5-116
Transmit I 2 of 5 Check Digit	Disable	5-118
Convert I 2 of 5 to EAN 13	Disable	5-119
Codabar		
Codabar	Disable	5-120
Set Lengths for Codabar	5-55	5-121
CLSI Editing	Disable	5-124
NOTIS Editing	Disable	5-125
RSS Codes		
RSS-14	Disable	5-126
RSS-Limited	Disable	5-127

Table 5-1. Default Table (Continued)

Parameter	Default	Page Number
RSS-Expanded	Disable	5-128
Data Options		
Transmit Code ID Character	None	5-129
Pause Duration	0	5-132
Prefix/Suffix Values	7013 (<CR/LF> for serial)	5-133
Scan Data Transmission Format	Data as is	5-134
Numeric Bar Codes		5-138



Set Default Parameter

Scanning this bar code returns all parameters to the default values listed in [Table 5-1 beginning on page 5-2](#).



SET ALL DEFAULTS

Host Type

If you're using a Synapse cable, your host is autodetected, so no host bar codes need to be scanned. If not, select an IBM 46XX, RS-232 or USB host from the following bar code menus.

IBM 46XX Host Types (LS 6005i)

To select one of the following as a POS Interface, scan the appropriate bar code below.

Note: *To properly communicate with 468X/9X terminals, the driver corresponding to the port being used must be loaded and enabled when you are configuring your terminal system. See your terminal's operating manual for details.*



Port 5B



Host Type (Cont'd)



Port 9B



Port 17/9E

Host Type (Cont'd)

RS-232C Host Types (LS 6004i)

Three RS-232C hosts are set up with their own parameter default settings (Table 5-2). Selecting the ICL, Fujitsu, or Nixdorf RS-232C terminal sets the defaults listed below. These defaults take precedence over standard defaults. So if you select Fujitsu RS-232C, then select the standard defaults, the Fujitsu defaults still take precedence.

Table 5-2. Terminal Specific RS-232C

Parameter	Standard	ICL	Fujitsu	Nixdorf Mode A/ Mode B
Transmit Code ID	No	Yes	Yes	Yes
Data Transmission Format	Data as is	Data/ Suffix	Data/ Suffix	Data/ Suffix
Suffix	CR/LF (7013)	CR (1013)	CR (1013)	CR (1013)
Baud Rate	9600	9600	9600	9600
Parity	Even	Even	None	Odd



Table 5-2. Terminal Specific RS-232C (Continued)

Parameter	Standard	ICL	Fujitsu	Nixdorf Mode A/ Mode B
Hardware Handshaking	None	RTS/ CTS Option 3	None	RTS/CTS Option 3
Software Handshaking	None	None	None	None
Serial Response Time-out	2 Sec.	9.9 Sec.	2 Sec.	9.9 Sec.
Stop Bit Select	One	One	One	One
ASCII Format	8-Bit	8-Bit	8-Bit	8-Bit
Beep On <BEL>	Disabled	Disabled	Disabled	Disabled
RTS Line State	Low	High	Low	*Low = No data to send

*In the Nixdorf Mode B, if CTS is Low, scanning is disabled. When CTS is High, the user can scan bar codes.

RS-232C Host Types (Cont'd)

Selecting the ICL, Fujitsu, or Nixdorf RS-232C terminal enables the transmission of Code ID Characters as listed in [Table 5-3](#), below. These Code ID Characters are not programmable and are separate from the Transmit Code ID feature. The Transmit Code ID feature should not be enabled for these terminals.

Table 5-3. Terminal Specific Code ID Characters

	ICL	FUJITSU	NIXDORF
UPC-A	"A"	"A"	"A"
UPC-E	"E"	"E"	"C0"
EAN-8	"FF"	"FF"	"B"
EAN-13	"F"	"F"	"A"
Code 39	"C" <len>	None	"M"
Codabar	"N" <len>	None	"N"
Code 128	"L" <len>	None	"K"
I 2 of 5	"I" <len>	None	"I"
UCC/EAN 128	"L" <len>	None	"P"
Bookland EAN	"F"	"F"	"A"



RS-232C Host Types (Cont'd)

To select an RS-232C Host Interface, scan one of the following bar codes.



STANDARD RS-232C



ICL RS-232C

RS-232C Host Types (Cont'd)



NIXDORF RS-232C Mode A



NIXDORF RS-232C Mode B



RS-232C Host Types (Cont'd)



FUJITSU RS-232C

Baud Rate

Baud rate is the number of bits of data transmitted per second. The scanner's baud rate setting should match the data rate setting of the host device. If not, data may not reach the host device or may reach it in distorted form.



BAUD RATE 300



Baud Rate (Cont'd)



BAUD RATE 600



BAUD RATE 1200

Baud Rate (Cont'd)



BAUD RATE 2400



BAUD RATE 4800



Baud Rate (Cont'd)



BAUD RATE 9600



BAUD RATE 19,200

Parity

A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

Odd

If you select **ODD** parity, the parity bit has a value 0 or 1, based on data, to ensure that an odd number of 1 bits are contained in the coded character.



ODD



Parity (Cont'd)

Even

If you select **EVEN** parity, the parity bit has a value 0 or 1, based on data, to ensure that an even number of 1 bits are contained in the coded character.



EVEN

Mark

Select **MARK** parity and the parity bit is always 1.



MARK

Parity (Cont'd)

Space

Select **SPACE** parity and the parity bit is always 0.



SPACE

None

Select **None** if no parity is desired.



NONE



Check Receive Errors

Select whether or not the parity, framing, and overrun of received characters are checked. The type of parity used is selectable through the **PARITY** parameter.



CHECK FOR RECEIVED ERRORS



DO NOT CHECK FOR RECEIVED ERRORS

Hardware Handshaking

The data interface consists of an RS-232C port. The port has been designed to operate either with or without the hardware handshaking lines, *Request to Send* (RTS), and *Clear to Send* (CTS).

If Standard RTS/CTS handshaking is selected, scan data is transmitted according to the following sequence:

- The controller reads the CTS line for activity. If CTS is asserted, the controller waits up to 2 seconds for the host to negate the CTS line. If, after 2 seconds (default), the CTS line is still asserted, the scanner sounds a transmit error and any scanned data is lost.
- When the CTS line is negated, the controller asserts the RTS line and waits up to 2 seconds for the host to assert CTS. When the host asserts CTS, data is transmitted. If, after 2 seconds (default), the CTS line is not asserted, the scanner sounds a transmit error and discards the data.
- When data transmission is complete, the controller negates RTS 10 msec after sending the last character.
- The host should respond by negating CTS. The controller checks for a negated CTS upon the next transmission of data.



Hardware Handshaking (Con't)

During the transmission of data, the CTS line should be asserted. If CTS is deasserted for more than 50 ms between characters, the transmission is aborted, the scanner sounds a transmission error, and the data is discarded.

If the above communications sequence fails, the scanner issues an error indication. In this case, the data is lost and must be rescanned.

If Hardware Handshaking and Software Handshaking are both enabled, Hardware Handshaking takes precedence.

Note: *The DTR signal is jumpered active.*

Scan one of the following bar codes to select an option below.

No Hardware Handshaking



NONE

Hardware Handshaking (Cont'd)

Standard RTS/CTS Hardware Handshaking



STANDARD RTS/CTS

RTS/CTS Option 1

When RTS/CTS Option 1 is selected, the scanner asserts RTS before transmitting and ignores the state of CTS. The scanner deasserts RTS when the transmission is complete.



RTS/CTS OPTION 1



Hardware Handshaking (Cont'd)

RTS/CTS Option 2

When Option 2 is selected, RTS is always high or low (user-programmed logic level). However, the scanner waits for CTS to be asserted before transmitting data. If CTS is not asserted within 2 seconds (default), the scanner issues an error indication and discards the data.



RTS/CTS OPTION 2

RTS/CTS Option 3

When Option 3 is selected, the scanner asserts RTS prior to any data transmission, regardless of the state of CTS. The scanner waits up to 2 seconds (default) for CTS to be asserted. If CTS is not asserted during this time, the scanner issues an error indication and discards the data. The scanner deasserts RTS when transmission is complete.



RTS/CTS OPTION 3

Software Handshaking

This parameter offers control of the data transmission process in addition to, or instead of, that offered by hardware handshaking. There are five options.

If Software Handshaking and Hardware Handshaking are both enabled, Hardware Handshaking takes precedence.

Scan the appropriate bar code to select one of the following options.

None

When this option is selected, data is transmitted immediately.



NONE



Software Handshaking (Cont'd)

ACK/NAK

When this option is selected, after transmitting data, the scanner expects either an ACK or NAK response from the host. Whenever a NAK is received, the scanner transmits the same data again and waits for either an ACK or NAK. After three unsuccessful attempts to send data when NAKs are received, the scanner issues an error indication and discards the data.

The scanner waits up to the programmable Host Serial Response Time-out to receive an ACK or NAK. If the scanner does not get a response in this time, it issues an error indication and discards the data. There are no retries when a time-out occurs.



ACK/NAK

Software Handshaking (Cont'd)

ENQ

When this option is selected, the scanner waits for an ENQ character from the host before transmitting data. If an ENQ is not received within 2 seconds, the scanner issues an error indication and discards the data. The host must transmit an ENQ character at least every 2 seconds to prevent transmission errors.



ENQ

ACK/NAK with ENQ

This combines the two previous options.



ACK/NAK with ENQ



Software Handshaking (Cont'd)

XON/XOFF

An XOFF character turns the scanner transmission off until the scanner receives an XON character. There are two situations for XON/XOFF:

- XOFF is received before the scanner has data to send. When the scanner has data to send, it then waits for an XON character before transmission. The scanner waits up to 2 seconds to receive the XON. If the XON is not received within this time, the scanner issues an error indication and discards the data.
- XOFF is received during a transmission. Data transmission then stops after sending the current byte. When the scanner receives an XON character, it sends the rest of the data message. The scanner waits indefinitely for the XON.



XON/XOFF

Host Serial Response Timeout

This parameter specifies how long the scanner waits for an ACK, NAK, or CTS before determining that a transmission error has occurred. This only applies when in one of the ACK/NAK Software Handshaking modes, or RTS/CTS Hardware Handshaking option.

The delay period can range from 0.0 to 9.9 seconds in 0.1-second increments. After scanning the bar code below, scan two numeric bar codes beginning on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



HOST SERIAL RESPONSE TIME-OUT



RTS Line State

This parameter is used to set the idle state of the Serial Host RTS line. Scan a bar code below to select **LOW RTS** line state or **HIGH RTS** line state.



HOST: LOW RTS



HOST: HIGH RTS

Stop Bit Select

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits selected (one or two) depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.



1 STOP BIT



2 STOP BITS



ASCII Format

This parameter allows the scanner to interface with devices requiring a 7-bit or 8-bit ASCII protocol.



7-BIT



8-BIT

Beep on <BEL>

When this parameter is enabled, the scanner issues a beep when a <BEL> character is detected on the RS-232C serial line. <BEL> is issued to gain a user's attention to indicate an illegal entry or other important event.



**BEEP ON <BEL> CHARACTER
(ENABLE)**



**DO NOT BEEP ON <BEL> CHARACTER
(DISABLE)**



Intercharacter Delay

Select the intercharacter delay option matching host requirements. The intercharacter delay gives the host system time to service its receiver and perform other tasks between characters. The delay period can range from no delay to 99 msec in 1-msec increments. After scanning the bar code below, scan two bar codes beginning on page [5-138](#) to set the desired time-out. If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



INTERCHARACTER DELAY

USB (LS 6007i)

The following USB parameters apply to the LS 6007i (with Synapse) only.

Set USB Defaults

Scan the bar code below to set USB defaults for the parameters on the following pages.



Set USB Defaults

USB Device Type

The LS 6007i attaches to a USB host or hub and supports the USB device options below, depending on the host type and desired mode of operation.

The mode of operation can be dynamically changed. However, the scanner resets and re-enumerates each time a new mode is selected. The re-enumeration process can take a few seconds to complete, during which the scanner turns off, disconnects, and reconnects to the host.

HID Keyboard Emulation

In this mode, the scanned data is presented to the system as if coming from a USB HID (Human Interface



Device) keyboard. Most operating systems have native support for this device, so no additional driver installation is required.

IBM SurePOS Hand-Held Bar Code Reader

This mode is supported by an IBM hand-held bar code reader driver on IBM SurePOS terminals.

IBM SurePOS Tabletop Bar Code Reader

This mode is supported by an IBM tabletop bar code reader driver on IBM SurePOS terminals.

Symbol Native Bar Code Reader

This mode is supported by a Symbol bar code reader driver and provides maximal flexibility and control over the scanner. The software will prompt you to select or install the driver. Follow the instructions on the screen.

Symbol COM Port Emulation

In this mode, scanned data is presented to the host as if it originated in a COM port. A Symbol driver is required to support this mode, but it provides compatibility for an application which supports a bar code reader attached to a COM port. The software will prompt you to select or install the driver. Follow the instructions on the screen.

Select the desired type of USB device. The default is IBM Hand-Held USB.

Note: *When changing USB Device Types, the LS 6007i turns off briefly and re-enumerates to properly communicate with the host.*



LS 6000i Series Product Reference Guide



Default USB Type



IBM Hand-Held USB (Default)



IBM Table Top USB



HID Keyboard Emulation



Symbol Native USB



Symbol COM Port Emulation

Country Selection

This setting applies only to the HID Keyboard Emulation device. The MacOS and Windows implement international keyboards differently. Select the desired country according to the USB host device. If your host platform does not appear here, select the Windows settings.



Note: *When changing the Country Selection, the LS 6007i turns off briefly and re-enumerates to properly communicate with the host.*



North American, Standard USB Keyboard



French, Windows



German, Windows



German, MacOS



French Canadian, Windows



French Canadian, MacOS



LS 6000i Series Product Reference Guide



Spanish (Traditional), Windows



Spanish ISO, MacOS



Italian, Windows



Italian, MacOS



Swedish, Windows



Swedish, MacOS



UK English, Windows



LS 6000i Series Product Reference Guide



UK English, MacOS



French, MacOS



Japanese, Windows



Japanese, MacOS

Keyboard Emulation

Keystroke Delay

This option applies only to the HID Keyboard Emulation device. Select the desired delay between transmitted keystrokes. Only change this setting for slower host PCs that cannot accommodate the speed of data transmitted.



No Delay (0 ms)



Medium Delay (20 ms)



Long Delay (40 ms)



Keyboard Emulation - CAPS LOCK

This option applies only to the HID Keyboard Emulation device. By default, if a bar code is scanned, Caps Lock Override is disabled and the case of the bar code data is not preserved. For example, if the CAPS LOCK is off and an uppercase character is transmitted, the host reads this as a lowercase character. By selecting “Enable Caps Lock Override”, the caps lock is turned off during transmission to preserve the case of the bar code data, then restored after transmission.



Disable Caps Lock Override



Enable Caps Lock Override

Keyboard Emulation and IBM - Ignore Unknown Characters

This option applies only to the HID Keyboard Emulation device and IBM device. Unknown characters are characters the host does not recognize. When “Send Bar Codes With Unknown Characters” is selected, all bar code data is sent except for unknown characters, and no error beeps sound. When “Do Not Send Bar Codes With Unknown Characters” is selected, bar codes containing at least one unknown character are not sent to the host, and an error beep sounds.



Send Bar Codes With Unknown Characters



Do Not Send Bar Codes With Unknown Characters



Trigger Mode

Scan a bar code below to select one of the following trigger modes:

- In Triggered Omnidirectional Mode, an omnidirectional scan pattern activates upon trigger pull.
- In Triggered Single Scan Line Mode, a single scan line appears upon trigger pull.
- If Combination Mode is selected, the omnidirectional scan pattern is always on and ready to decode. When the trigger is pulled, the scanner emits a single scan line to decode, then reverts back to omnidirectional constant-on. This mode is only for hand-held use.



**COMBINATION MODE
(CONSTANT-ON OMNIDIRECTIONAL/TRIGGERED
SINGLE SCAN LINE)
(Default)**

Trigger Mode (Cont'd)



TRIGGERED SINGLE SCAN LINE MODE



TRIGGERED OMNIDIRECTIONAL MODE



Time to Return to Continuous Omnidirectional

This parameter sets the time the scanner issues a single scan line on trigger pull before returning to the constant-on omnidirectional pattern. It is programmable in 0.1 second increments from 0.0 to 9.9 seconds. If this value is set to 0, the trigger mode will not return to constant-on omnidirectional automatically. In this case, pull the trigger twice quickly to return to the constant-on omnidirectional pattern.

To set this time, scan the bar code. Next scan two numeric bar codes beginning on page [5-138](#), the first representing seconds, the second tenths of seconds. If you make an error, or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



TIME TO RETURN TO CONTINUOUS OMNI

Beeper Volume

To select a decode beep volume, scan the **LOW VOLUME**, **MEDIUM VOLUME**, or **HIGH VOLUME** bar code.



LOW VOLUME



Beeper Volume (Cont'd)



MEDIUM VOLUME



HIGH VOLUME

Beeper Frequency

To select a decode beep frequency (tone), scan the **LOW FREQUENCY**, **MEDIUM FREQUENCY**, or **HIGH FREQUENCY** bar code.



LOW FREQUENCY



Beeper Frequency (Cont'd)



MEDIUM FREQUENCY



HIGH FREQUENCY

Time-out Between Decodes, Same Symbol

This parameter sets the minimum time between decodes of the same symbol. It is programmable in 0.1 second increments from 0.0 to 9.9 seconds. (Setting this above 0.4 seconds is recommended.)

Scan the bar code below to select a new time-out. Next scan two numeric bar codes beginning on page [5-138](#), the first representing seconds, the second tenths of seconds. If you make an error, or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



TIME-OUT BETWEEN SAME SYMBOL



Time-out Between Decodes, Different Symbols

This parameter sets the minimum time between decodes of different symbols. It is programmable in 0.1 second increments from 0.0 to 9.9 seconds.

Scan the bar code below, then scan two numeric bar codes beginning on page [5-138](#), the first representing seconds, the second tenths of seconds. If you make an error, or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



TIME-OUT BETWEEN DIFFERENT SYMBOLS

Laser On Time

This parameter sets the maximum time decode processing continues during a scan attempt. It is programmable in 0.1 second increments from 0.5 to 9.9 seconds.

To set a Laser On Time, scan the bar code below. Next scan two numeric bar codes beginning on page [5-138](#) that correspond to the desired time on. Single digit numbers must have a leading zero. For example, to set a Time On of 0.5 seconds, scan the bar code below, then scan the “0” and “5” bar codes. If you make an error, or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



LASER ON TIME



Rest Mode Time-out

This parameter sets the time the scanner remains active after any scanning activity. Scan one of the four options. Depending on the selection, the scanner enters a low power “rest” mode 15, 30, 60, or 90 minutes after the last attempted decode. The laser blinks during this rest mode to conserve power. To awaken the scanner, present the bar code you wish to scan to the scan window.



15 MINUTES



30 MINUTES

Rest Mode Timeout (Cont'd)



60 MINUTES



90 MINUTES



Beep After Good Decode

Scan a bar code below to select whether or not the unit beeps after a good decode. If disabled, the beeper still operates during parameter menu scanning and indicates error conditions.



BEEP AFTER GOOD DECODE



DO NOT BEEP AFTER GOOD DECODE

Linear Code Type Security Level

Note: *Does not apply to Code 128.*

The LS 6000i offers four levels of decode security for linear code types (e.g., Code 39, Interleaved 2 of 5). Higher security levels are selected for decreasing levels of bar code quality. As security levels increase, the scanner's aggressiveness decreases.

Select the security level appropriate for your bar code quality.

Linear Security Level 1

The following code types must be successfully read twice before being decoded:

Code Type	Length
Codabar	All
1 2 of 5	8 or less



LINEAR SECURITY LEVEL 1

Linear Security Level 2

The following code types must be successfully read twice before being decoded:

Code Type	Length
All	All



LINEAR SECURITY LEVEL 2

Linear Security Level 3

Code types other than the following must be successfully read twice before being decoded. The following codes must be read three times:

Code Type	Length
1 2 of 5	8 or less
Codabar	8 or less



LINEAR SECURITY LEVEL 3

Linear Security Level 4

The following code types must be successfully read three times before being decoded:

Code Type	Length
All	All



LS 6000i Series Product Reference Guide



LINEAR SECURITY LEVEL 4

UPC/EAN Options

Enable/Disable UPC-E

To enable or disable UPC-E, scan the appropriate bar code.



ENABLE UPC-E



DISABLE UPC-E



Enable/Disable UPC-A

To enable or disable UPC-A, scan the appropriate bar code.



ENABLE UPC-A



DISABLE UPC-A

Enable/Disable EAN-8

To enable or disable EAN-8, scan the appropriate bar code below.



ENABLE EAN-8



DISABLE EAN-8



Enable/Disable EAN-13

To enable or disable EAN-13, scan the appropriate bar code below.



ENABLE EAN-13



DISABLE EAN-13

Enable/Disable Bookland EAN

To enable or disable EAN Bookland, scan the appropriate bar code below.



ENABLE BOOKLAND EAN



DISABLE BOOKLAND EAN




Decode UPC/EAN Supplementals

Supplementals are additionally appended characters (2 or 5) according to specific code format conventions (e.g., UPC A+2, UPC E+2, EAN 8+2). Three options are available.

- If UPC/EAN with supplemental characters is selected, UPC/EAN symbols without supplemental characters are not decoded.
- If UPC/EAN without supplemental characters is selected, and the LS 6000i is presented with a UPC/EAN plus supplemental symbol, the UPC/EAN is decoded and the supplemental characters ignored.
- An autodiscriminate option is also available. If this option is selected, choose an appropriate [Decode UPC/EAN Supplemental Redundancy](#) value from [page 5-78](#). A value of 5 or more is recommended.

Note: *In order to minimize the risk of invalid data transmission, it is recommended that you select whether to read or ignore supplemental characters.*

Decode UPC/EAN Supplementals (Cont'd)



**DECODE UPC/EAN WITH
SUPPLEMENTALS**



**IGNORE UPC/EAN WITH SUP-
PLEMENTALS**



**AUTODISCRIMINATE UPC/
EAN SUPPLEMENTALS**



Decode UPC/EAN Supplemental Redundancy

With Autodiscriminate UPC/EAN Supplementals selected, this option adjusts the number of times a symbol without supplementals is decoded before transmission. The range is from two to twenty times. Five or above is recommended when decoding a mix of UPC/EAN symbols with and without supplementals, and the autodiscriminate option is selected.

Scan the bar code below to select a decode redundancy value. Next scan two numeric bar codes beginning on page [5-138](#). Single digit numbers must have a leading zero. If you make an error, or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



**DECODE UPC/EAN
SUPPLEMENTAL REDUNDANCY**

Transmit UPC-A Check Digit

Scan the appropriate bar code below to transmit the symbol with or without the UPC-A check digit.



**TRANSMIT UPC-A
CHECK DIGIT**



**DO NOT TRANSMIT UPC-A
CHECK DIGIT**



Transmit UPC-E Check Digit

Scan the appropriate bar code below to transmit the symbol with or without the UPC-E check digit.



**TRANSMIT UPC-E
CHECK DIGIT**



**DO NOT TRANSMIT UPC-E
CHECK DIGIT**

Random Weight Check Digit

A 4-digit or 5-digit random weight check digit may be embedded in a UPC-A or EAN-13 bar code for additional price verification. To enable either of these options, or disable the option completely, scan the appropriate bar code below.



**DISABLE RANDOM WEIGHT
CHECK DIGIT**



**ENABLE 4-DIGIT RANDOM
WEIGHT CHECK DIGIT**



**ENABLE 5-DIGIT RANDOM
WEIGHT CHECK DIGIT**



UPC-A Preamble

Three options are given for lead-in characters for UPC-A symbols transmitted to the host device: transmit system character only, transmit system character and country code ("0" for USA), and no preamble transmitted. The lead-in characters are considered part of the symbol.



NO PREAMBLE
(<DATA>)

UPC-A Preamble (Cont'd)



**SYSTEM CHARACTER
(<SYSTEM CHARACTER> <DATA>)**



**SYSTEM CHARACTER & COUNTRY CODE
(< COUNTRY CODE> <SYSTEM CHARACTER>
<DATA>)**



UPC-E Preamble

Three options are given for lead-in characters for UPC-E symbols transmitted to the host device: transmit system character only, transmit system character and country code ("0" for USA), and no preamble transmitted. The lead-in characters are considered part of the symbol.



**NO PREAMBLE
(<DATA>)**

UPC-E Preamble (Cont'd)



**SYSTEM CHARACTER
(<SYSTEM CHARACTER> <DATA>)**



**SYSTEM CHARACTER & COUNTRY CODE
(< COUNTRY CODE> <SYSTEM CHARACTER>
<DATA>)**



Convert UPC-E to UPC-A

This parameter converts UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and be affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Scanning **DO NOT CONVERT UPC-E TO UPC-A** allows you to transmit UPC-E (zero suppressed) decoded data.



**CONVERT UPC-E TO UPC-A
(ENABLE)**



**DO NOT CONVERT UPC-E TO UPC-A
(DISABLE)**

EAN Zero Extend

If this parameter is enabled, five leading zeros are added to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols.

Disabling this parameter returns EAN-8 symbols to their normal format.



ENABLE EAN ZERO EXTEND



DISABLE EAN ZERO EXTEND



UPC/EAN Predecode Block

UPC/EAN bar codes are made up of two blocks representing “left” and “right” halves. For example, bar code 1234567890 is divided into left block “12345”, and right block “67890”. To maximize its aggressiveness, the LS 6000i can decode a UPC/EAN symbol by “splicing” together a left block read by one scan line, and a right block read by another.

Reject Predecode Block

This option provides additional protection (beyond the embedded check digit) against mis-splicing a UPC/EAN block from a symbol that has just been decoded (but has not completely exited the scanner’s field of view), with a block from a new symbol that has just been presented to the scanner. This option requires the scanner to compare the new symbol against the symbol just decoded to see if there are common blocks. If either the left or right blocks match between symbols, the scanner rejects the common block for the programmed Decode Time-Off interval.



REJECT PREDECODE BLOCK

Accept Predecode Block

This option allows immediate decode of a new UPC/EAN bar code regardless of the previously decoded UPC/EAN bar code's block content.



ACCEPT PREDECODE BLOCK



UPC/EAN Security Level

The LS 6000i offers four levels of decode security for UPC/EAN bar codes. Increasing levels of security are provided for decreasing levels of bar code quality. There is an inverse relationship between security and scanner aggressiveness, so be sure to choose only that level of security necessary for any given application.

UPC/EAN Security Level 0

This is the default setting which allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding “in-spec” UPC/EAN bar codes.



UPC/EAN SECURITY LEVEL 0

UPC/EAN Security Level 1

As bar code quality levels diminish, certain characters become prone to misdecodes before others (i.e., 1, 2, 7, 8). If you are experiencing mis-decodes of poorly printed

bar codes, and the mis-decodes are limited to these characters, select this security level.



UPC/EAN SECURITY LEVEL 1

UPC/EAN Security Level 2

If you are experiencing misdecodes of poorly printed bar codes, and the misdecodes are not limited to characters 1, 2, 7, and 8, select this security level.



UPC/EAN SECURITY LEVEL 2

UPC/EAN Security Level 3

If you have tried Security Level 2, and are still experiencing misdecodes, select this security level. Be



advised, selecting this option is an extreme measure against misdecoding severely out of spec bar codes. Selection of this level of security significantly impairs the decoding ability of the scanner. If this level of security is necessary, you should try to improve the quality of your bar codes.



UPC/EAN SECURITY LEVEL 3

Linear UPC/EAN Decode

This option applies to code types containing two adjacent blocks (e.g., UPC-A, EAN-8, EAN-13). When enabled, a bar code is transmitted only when both the left and right blocks are successfully decoded within one laser scan. This option should be enabled when bar codes are in proximity to each other.



ENABLE LINEAR UPC/EAN DECODE



DISABLE LINEAR UPC/EAN DECODE



Linear Supplemental Decode

This option applies to code types containing two or five character supplementals. When enabled, a bar code is transmitted only when both the supplemental block and its adjacent block are successfully decoded within one laser scan. This option should be enabled when bar codes are in proximity to each other.



ENABLE LINEAR SUPPLEMENTAL DECODE



DISABLE LINEAR SUPPLEMENTAL DECODE

UPC/EAN Decode Performance

This option offers three levels of decode performance (aggressiveness) for UPC/EAN symbols without supplementals. Increasing the performance level reduces the amount of required bar code orientation, which is useful if you are scanning very long and/or truncated bar codes. Increased levels reduce decode security.

If you enable this option, select a performance level from the next page.



ENABLE UPC/EAN DECODE PERFORMANCE



DISABLE UPC/EAN DECODE PERFORMANCE



UPC/EAN Decode Performance (Cont'd)

If Decode Performance is enabled, select a level below.



**UPC/EAN DECODE
PERFORMANCE LEVEL 1**



**UPC/EAN DECODE
PERFORMANCE LEVEL 2**



**UPC/EAN DECODE
PERFORMANCE LEVEL 3**

UPC/EAN Coupon Code

When enabled, this parameter decodes UPC-A, UPC-A with 2 supplemental characters, UPC-A with 5 supplemental characters, and UPC-A/EAN 128 bar codes. *Autodiscriminate UPC/EAN With Supplemental Characters* must be enabled.



ENABLE UPC/EAN COUPON CODE



DISABLE UPC/EAN COUPON CODE



Code 128 Options

Enable/Disable Code 128

To enable or disable Code 128, scan the appropriate bar code below.



ENABLE CODE 128



DISABLE CODE 128

Code 128 Decode Performance

This option offers three levels of decode performance (aggressiveness) for Code 128 symbols. Increasing the performance level reduces the amount of required bar code orientation, which is useful if you are scanning very long and/or truncated bar codes. Increased levels reduce decode security.

If you enable this option, you may select a decode performance level from the next page.



ENABLE CODE 128 DECODE PERFORMANCE



DISABLE CODE 128 DECODE PERFORMANCE



Code 128 Decode Performance (Cont'd)

If Decode Performance is enabled, select a level below.



**CODE 128 DECODE
PERFORMANCE LEVEL 1**



**CODE 128 DECODE
PERFORMANCE LEVEL 2**



**CODE 128 DECODE
PERFORMANCE LEVEL 3**

Enable/Disable UCC/EAN-128

To enable or disable UCC/EAN-128, scan the appropriate bar code below. (See *Appendix A* for details on [UCC/EAN-128](#).)



ENABLE UCC/EAN-128



DISABLE UCC/EAN-128



Code 39 Options

Enable/Disable Code 39

To enable or disable Code 39, scan the appropriate bar code below.



ENABLE CODE 39



DISABLE CODE 39

Set Lengths for Code 39

Lengths for Code 39 may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. If Code 39 Full ASCII is enabled, **Length Within a Range** or **Any Length** are the preferred options.

One Discrete Length

This option allows you to decode only those codes containing a selected length. For example, if you select **Code 39 One Discrete Length**, then scan **1, 4**, only Code 39 symbols containing 14 characters are decoded. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



CODE 39 - ONE DISCRETE LENGTH

Two Discrete Lengths

This option allows you to decode only those codes containing two selected lengths. For example, if you



select **Code 39 Two Discrete Lengths**, then scan **0, 2, 1, 4**, only Code 39 symbols containing 2 or 14 characters are decoded. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



CODE 39 - TWO DISCRETE LENGTHS

Length Within Range

This option allows you to decode a code type within a specified range. For example, to decode Code 39 symbols containing between 4 and 12 characters, first scan **Code 39 Length Within Range**. Then scan **0, 4, 1, and 2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



CODE 39 - LENGTH WITHIN RANGE

Any Length

Scanning this option allows you to decode Code 39 symbols containing any number of characters.



CODE 39 - ANY LENGTH



Code 39 Check Digit Verification

When enabled, this parameter checks the integrity of a Code 39 symbol to ensure it complies with specified algorithms.

Only those code 39 symbols which include a modulo 43 check digit are decoded when this parameter is enabled.



ENABLE CODE 39 CHECK DIGIT



DISABLE CODE 39 CHECK DIGIT

Transmit Code 39 Check Digit

Scan a bar code below to transmit the data with or without the check digit.



**TRANSMIT CODE 39 CHECK DIGIT
(ENABLE)**



**DO NOT TRANSMIT CODE 39 CHECK DIGIT
(DISABLE)**



Code 39 Decode Performance

This option offers three levels of decode performance (aggressiveness) for Code 39 symbols. Increasing the performance level reduces the amount of required bar code orientation, which is useful if you are scanning very long and/or truncated bar codes. Increased levels reduce decode security.

If you enable this option, you may select a decode performance level from the next page.

Note: *This option only works with Code 39 One Discrete Length.*



ENABLE CODE 39 DECODE PERFORMANCE



DISABLE CODE 39 DECODE PERFORMANCE

Code 39 Decode Performance (Cont'd)

If Decode Performance is enabled, select a level below.



**CODE 39 DECODE
PERFORMANCE LEVEL 1**



**CODE 39 DECODE
PERFORMANCE LEVEL 2**



**CODE 39 DECODE
PERFORMANCE LEVEL 3**



Enable/Disable Code 39 Full ASCII

To enable or disable Code 39 Full ASCII, scan the appropriate bar code below.

When enabled, the ASCII character set assigns a code to letters, punctuation marks, numerals, and most control keystrokes on the keyboard.

The first 32 codes are non-printable and are assigned to keyboard control characters such as BACKSPACE and RETURN. The other 96 are called printable codes because all but SPACE and DELETE produce visible characters.

Code 39 Full ASCII interprets the bar code special character (\$ + % /) preceding a Code 39 character and assigns an ASCII character value to the pair. For example, when Code 39 Full ASCII is enabled and a **+B** is scanned, it is interpreted as **b**, **%J** as **?**, and **\$H** emulates the keystroke **BACKSPACE**. Scanning **ABC\$M** outputs the keystroke equivalent of **ABC ENTER**. Refer to [Table A-4](#) in *Appendix A*.

The scanner does not autodiscriminate between Code 39 and Code 39 Full ASCII.

Enable/Disable Code 39 Full ASCII (Cont'd)



ENABLE CODE 39 FULL ASCII



DISABLE CODE 39 FULL ASCII



Interleaved 2 of 5 Options

Enable/Disable Interleaved 2 of 5

To enable or disable Interleaved 2 of 5, scan the appropriate bar code below.



ENABLE INTERLEAVED 2 OF 5



DISABLE INTERLEAVED 2 OF 5

Set Lengths for Interleaved 2 of 5

Lengths for I 2 of 5 may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters) the code contains, and includes check digits. Scan the appropriate bar code to select one of the following options.

One Discrete Length

This option allows you to decode only those codes containing a selected length. For example, if you select **I 2 of 5 One Discrete Length**, then scan **1, 4**, the only I 2 of 5 symbols decoded are those containing 14 characters. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



I 2 of 5 - ONE DISCRETE LENGTH

Two Discrete Lengths

This option allows you to decode only those codes containing two selected lengths. For example, if you select **I 2 of 5 Two Discrete Lengths**, then scan **0, 2, 1**,



4, the only I 2 of 5 symbols decoded are those containing 2 or 14 characters. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



I 2 of 5 - TWO DISCRETE LENGTHS

Length Within Range

This option allows you to decode a code type within a specified range. For example, to decode I 2 of 5 symbols containing between 4 and 12 characters, first scan **I 2 of 5 Length Within Range**. Then scan **0, 4, 1, and 2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



I 2 of 5 - LENGTH WITHIN RANGE

Any Length

Scanning this option allows you to decode 1 2 of 5 symbols containing any number of characters.

Note: *Selecting the Any Length option may lead to misdecodes for 1 2 of 5 codes.*



1 2 of 5 - ANY LENGTH



1 2 of 5 Check Digit Verification

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies a specified algorithm, either Uniform Symbology Specification (USS), or Optical Product Code Council (OPCC).



DISABLE

1 2 of 5 Check Digit Verification (Cont'd)



USS CHECK DIGIT



OPCC CHECK DIGIT



Transmit 1 2 of 5 Check Digit

Scan a bar code below to transmit the data with or without the check digit.



**TRANSMIT 1 2 of 5 CHECK DIGIT
(ENABLE)**



**DO NOT TRANSMIT 1 2 of 5 CHECK DIGIT
(DISABLE)**

Convert I 2 of 5 to EAN-13

This parameter converts a 14 character I 2 of 5 code into EAN-13, and transmits to the host as EAN-13. In order to accomplish this, the I 2 of 5 code must be enabled, one length must be set to 14, and the code must have a leading zero and a valid EAN-13 check digit.



**CONVERT I 2 of 5 to EAN-13
(ENABLE)**



**DO NOT CONVERT I 2 of 5 to EAN-13
(DISABLE)**



Codabar Options

Enable/Disable Codabar

To enable or disable Codabar, scan the appropriate bar code below.



ENABLE CODABAR



DISABLE CODABAR

Set Lengths for Codabar

Lengths for Codabar may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters) the code contains. It also includes any start or stop characters. Scan the appropriate bar code to select one of the following options.

One Discrete Length

This option allows you to decode only those codes containing a selected length. For example, if you select **Codabar One Discrete Length**, then scan **1, 4**, the only Codabar symbols decoded are those containing 14 characters. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



CODABAR - ONE DISCRETE LENGTH

Two Discrete Lengths

This option allows you to decode only those codes containing two selected lengths. For example, if you select **Codabar Two Discrete Lengths**, then scan **0, 2**,



1, 4, the only Codabar symbols decoded are those containing 2 or 14 characters. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



CODABAR - TWO DISCRETE LENGTHS

Length Within Range

This option allows you to decode a code type within a specified range. For example, to decode Codabar symbols containing between 4 and 12 characters, first scan **Codabar Length Within Range**. Then scan **0, 4, 1, and 2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code on page 5-143](#).



CODABAR - LENGTH WITHIN RANGE

Any Length

Scanning this option allows you to decode Codabar symbols containing any number of characters.



CODABAR - ANY LENGTH



CLSI Editing

When enabled, this parameter strips the start and stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar symbol.

Note: *Symbol length does not include start and stop characters.*



ENABLE CLSI EDITING



DISABLE CLSI EDITING

NOTIS Editing

When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.



ENABLE NOTIS EDITING



DISABLE NOTIS EDITING



RSS Codes

RSS-14



Enable RSS-14



Disable RSS-14

RSS-Limited



Enable RSS-Limited



Disable RSS-Limited



RSS-Expanded



Enable RSS-Expanded



Disable RSS-Expanded

Transmit Code ID Character

A code ID character identifies the code type of a scanned bar code. This may be useful when the scanner is decoding more than one code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

The user may select no code ID character, a Symbol Code ID character, or an AIM Code ID character. The Symbol Code ID characters are listed below; see [AIM Code Identifiers](#) in *Appendix A*.



LS 6000i Series Product Reference Guide

Code Type	Symbol Identifier
UPC-A, UPC-E, UPC-E1, EAN-13, EAN-8	A
Code 39, Code 32	B
Codabar	C
Code 128, ISBT 128	D
Code 93	E
Interleaved 2 of 5	F
Discrete 2 of 5, D 2 of 5 IATA	G
MSI Plessey	J
UCC/EAN 128	K
Bookland EAN	L
Trioptic Code 39	M
Coupon Code	N
RSS Family Codes	R
PDF417, MicroPDF	X



SYMBOL CODE ID CHARACTER

Transmit Code ID Character (Cont'd)



AIM CODE ID CHARACTER



NONE



Pause Duration

This parameter allows a pause to be inserted at any point in the data transmission. Pauses are set by scanning a two-digit number (i.e., two bar codes), and are measured in 1/10 second intervals. For example, scanning bar codes “0” and “1” inserts a 1/10 second pause; “0” and “5” gives you a 1/2 second delay. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [DATA FORMAT CANCEL bar code on page 5-137](#).



PAUSE DURATION

Prefix/Suffix Values

A prefix/suffix may be appended to scan data for use in data editing. These values are set by scanning a four-digit number (i.e., four bar codes) that corresponds to key codes for various terminals. See [Table A-4](#) in *Appendix A* for conversion information. Numeric bar codes begin on page [5-138](#). If you make an error or wish to change your selection, scan [CANCEL bar code](#) on page [5-143](#).



SCAN PREFIX



SCAN SUFFIX



Scan Data Transmission Format

To change the Scan Data Transmission Format, scan the **SCAN OPTIONS** bar code below. Then select one of four options. When you have made your selection, scan the [ENTER bar code on page 5-137](#). If you make a mistake, scan the [DATA FORMAT CANCEL bar code on page 5-137](#).



SCAN OPTIONS

Scan Data Transmission Format (Cont'd)



DATA AS IS



<DATA> <SUFFIX>



Scan Data Transmission Format (Cont'd)



<PREFIX> <DATA>



<PREFIX> <DATA> <SUFFIX>

Scan Data Transmission Format (Cont'd)



ENTER



DATA FORMAT CANCEL



Numeric Bar Codes

For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).



0



1

Numeric Bar Codes (Cont'd)



2



3



Numeric Bar Codes (Cont'd)



4



5

Numeric Bar Codes (Cont'd)



6



7



Numeric Bar Codes (Cont'd)



8



9

Cancel

If you make an error or wish to change your selection, scan the bar code below.



CANCEL



LS 6000i Series Product Reference Guide



Appendix A

Programming Reference

UCC/EAN-128

UCC/EAN-128 is a convention for printing data fields with standard Code 128 bar code symbols. UCC/EAN-128 symbols are distinguished by a leading FNC 1 character as the first or second character in the symbol. Other FNC 1 characters are used to delineate fields.

When EAN-128 symbols are read, they are transmitted after special formatting strips off the leading FNC 1 character and replaces other FNC 1 characters with the ASCII 29 GS control character.

When AIM symbology identifiers are transmitted, the modifier character indicates the position of the leading FNC 1 character according to AIM guidelines. For example, **jc1** indicates a UCC/EAN-128 symbol with a leading FNC1 character.



Standard Code 128 bar codes which do not have a leading FNC 1 may still be used but are not encoded according to the EAN-128 convention. Standard Code 128 and UCC/EAN-128 may be mixed in an application. The LS 6000i autodiscriminates between these symbols, and can enable or disable one or both code types via bar code menus. [Table A-1](#) indicates the behavior of the LS 6000i in each of the four possible parameter settings.

Table A-1. Reading Standard Code128 & UCC/EAN 128

Standard Code 128	UCC/EAN-128	Effect and Example
Disable	Disable	No Code 128 symbols can be read.
Disable	Enable	Read only symbols with leading FNC 1. Examples: FNC1ABCD ^{FNC1} E are read as ABCD ²⁹ E A ^{FNC1} BCD ^{FNC1} E are read as ABCD ²⁹ E FNC1FNC1ABCD ^{FNC1} E are read as ABCD ²⁹ E ABCD ^{FNC1} E cannot be read ABCDE cannot be read

Table A-1. Reading Standard Code128 & UCC/EAN 128 (Continued)

Standard Code 128	UCC/EAN-128	Effect and Example
Enable	Disable	<p>Read only symbols without leading FNC 1.</p> <p>Examples:</p> <p>FNC1ABCD^{FNC1}E cannot be read</p> <p>A^{FNC1}BCD^{FNC1}E cannot be read</p> <p>FNC1FNC1ABCD^{FNC1}E cannot be read</p> <p>ABCD^{FNC1}E is read as ABCD²⁹E</p> <p>ABCDE is read as ABCDE</p>
Enable	Enable	<p>Read both types of symbols.</p> <p>Examples:</p> <p>FNC1ABCD^{FNC1}E are read as ABCD²⁹E</p> <p>A^{FNC1}BCD^{FNC1}E are read as ABCD²⁹E</p> <p>FNC1FNC1ABCD^{FNC1}E are read as ABCD²⁹E</p> <p>ABCD^{FNC1}E is read as ABCD²⁹E</p> <p>ABCDE is read as ABCDE</p>



AIM Code Identifiers

Each AIM Code Identifier contains the three-character string **]cm** where:

-] =** Flag Character (ASCII 93)
- c =** Code Character (see Table A-2)
- m =** Modifier Character (see Table A-3)

Table A-2. AIM Code Identifiers

Code Character	Code Type
A	Code 39
C	Code 128, ISBT 128, EAN128
E	UPC/EAN
e	RSS Family, EAN/UCC Composites (RSS & UCC/EAN-128 only)
F	Codabar
G	Code 93
I	Interleaved 2 of 5
L	PDF417, MicroPDF417
M	MSI Plessey
S	D 2 of 5, IATA 2 of 5
X	Code 39 Trioptic, Bookland EAN

Modifier Characters

The modifier character is the sum of the applicable option values based on Table A-3.

Table A-3. Modifier Characters

Code Type	Option Value	Option
Code 39	0	No check character or Full ASCII processing.
	1	Reader has checked one check character.
	3	Reader has checked and stripped check character.
	4	Reader has performed Full ASCII character conversion.
	5	Reader has performed Full ASCII character conversion and checked one check character.
	7	Reader has performed Full ASCII character conversion and checked and stripped check character.
Example: A Full ASCII bar code with check character W, A+I+MI+DW , is transmitted as J A7 AimId where 7 = (3+4).		



Table A-3. Modifier Characters (Continued)

Code Type	Option Value	Option
Code 128	0	Standard data packet, no Function code 1 in first symbol position.
	1	Function code 1 in first symbol character position.
	2	Function code 1 in second symbol character position.
	Example:A Code (EAN) 128 bar code with Function 1 character in the first position, ^{FNC1} Aim Id is transmitted as JC1AimId	
I 2 of 5	0	No check digit processing.
	1	Reader has validated check digit.
	3	Reader has validated and stripped check digit.
	Example:An I 2 of 5 bar code without check digit, 4123, is transmitted as J104123	
Codabar	0	No check digit processing.
	1	Reader has checked check digit.
	3	Reader has stripped check digit before transmission.
	Example:A Codabar bar code without check digit, 4123, is transmitted as JF04123	

Table A-3. Modifier Characters (Continued)

Code Type	Option Value	Option
UPC/EAN	0	Standard packet in full EAN country code format, which is 13 digits for UPC-A and UPC-E (not including supplemental data).
	1	Two-digit supplement data only.
	2	Five-digit supplement data only.
	4	EAN-8 data packet.
	Example: A UPC-A bar code 012345678905 is transmitted as JE00012345678905	
Bookland EAN	0	No options specified at this time. Always transmit 0.
	Example: A Bookland EAN bar code 123456789X is transmitted as JX0123456789X	
RSS Family Note: In UCC/EAN-128 emulation mode, RSS is transmitted using Code 128 rules (i.e., J C1).	0	No option specified at this time. Always transmit 0. RSS-14 and RSS-Limited transmit with an Application Identifier “01”.
	Example: An RSS-14 bar code 100123456788902 is transmitted as Je001100123456788902 .	



According to AIM standards, a UPC with supplemental bar code is transmitted in the following format:

JE0 (UPC chars) (terminator) **JE2** (supplemental) (terminator)

In the LS 6000i, however, the format is changed to:

JE0 (UPC chars) **JE2** (supplemental)

Therefore, a UPC with two supplemental characters, 01234567890510, is transmitted to the host as a 21-character string, **JE00012345678905JE110**.

ASCII Character Set

Refer to the table below for ASCII values.

Table A-4. ASCII Character Set

ASCII Value	Full ASCII Code 39 Encode Char	Keystroke	ASCII Value	Full ASCII Code 39 Encode Char	Keystroke
1000	%U	CTRL 2	1024	\$X	CTRL X
1001	\$A	CTRL A	1025	\$Y	CTRL Y
1002	\$B	CTRL B	1026	\$Z	CTRL Z
1003	\$C	CTRL C	1027	%A	CTRL [
1004	\$D	CTRL D	1028	%B	CTRL \
1005	\$E	CTRL E	1029	%C	CTRL]
1006	\$F	CTRL F	1030	%D	CTRL 6
1007	\$G	CTRL G	1031	%E	CTRL -
1008	\$H	CTRL H	1032	Space	Space
1009	\$I	CTRL I	1033	/A	!
1010	\$J	CTRL J	1034	/B	'
1011	\$K	CTRL K	1035	/C	#
1012	\$L	CTRL L	1036	/D	\$
1013	\$M	CTRL M	1037	/E	%
1014	\$N	CTRL N	1038	/F	&
1015	\$O	CTRL O	1039	/G	'
1016	\$P	CTRL P	1040	/H	(
1017	\$Q	CTRL Q	1041	/I)
1018	\$R	CTRL R	1042	/J	*
1019	\$S	CTRL S	1043	/K	+
1020	\$T	CTRL T	1044	/L	,
1021	\$U	CTRL U	1045	-	-
1022	\$V	CTRL V	1046	.	.
1023	\$W	CTRL W	1047	/	/



Table A-4. ASCII Character Set (Continued)

ASCII Value	Full ASCII Code 39 Encode Char	Keystroke	ASCII Value	Full ASCII Code 39 Encode Char	Keystroke
1048	0	0	1073	I	I
1049	1	1	1074	J	J
1050	2	2	1075	K	K
1051	3	3	1076	L	L
1052	4	4	1077	M	M
1053	5	5	1078	N	N
1054	6	6	1079	O	O
1055	7	7	1080	P	P
1056	8	8	1081	Q	Q
1057	9	9	1082	R	R
1058	/Z	:	1083	S	S
1059	%F	;	1084	T	T
1060	%G	<	1085	U	U
1061	%H	=	1086	V	V
1062	%I	>	1087	W	W
1063	%J	?	1088	X	X
1064	%V	@	1089	Y	Y
1065	A	A	1090	Z	Z
1066	B	B	1091	%K	[
1067	C	C	1092	%L	\
1068	D	D	1093	%M]
1069	E	E	1094	%N	^
1070	F	F	1095	%O	_
1071	G	G	1096	%W	·
1072	H	H	1097	+A	a

Table A-4. ASCII Character Set (Continued)

ASCII Value	Full ASCII Code 39 Encode Char	Keystroke	ASCII Value	Full ASCII Code 39 Encode Char	Keystroke
1098	+B	b	1113	+Q	q
1099	+C	c	1114	+R	r
1100	+D	d	1115	+S	s
1101	+E	e	1116	+T	t
1102	+F	f	1117	+U	u
1103	+G	g	1118	+V	v
1104	+H	h	1119	+W	w
1105	+I	i	1120	+X	x
1106	+J	j	1121	+Y	y
1107	+K	k	1122	+Z	z
1108	+L	l	1123	%P	{
1109	+M	m	1124	%Q	
1110	+N	n	1125	%R	}
1111	+O	o	1126	%S	~
1112	+P	p	1127		Undefined



Table A-4. ASCII Character Set (Continued)

ALT Keys	Keystroke	ALT Keys	Keystroke	ALT Keys	Keystroke
2064	ALT 2	2075	ALT K	2086	ALT V
2065	ALT A	2076	ALT L	2087	ALT W
2066	ALT B	2077	ALT M	2088	ALT X
2067	ALT C	2078	ALT N	2089	ALT Y
2068	ALT D	2079	ALT O	2090	ALT Z
2069	ALT E	2080	ALT P	2091	ALT [
2070	ALT F	2081	ALT Q	2092	ALT \
2071	ALT G	2082	ALT R	2093	ALT]
2072	ALT H	2083	ALT S	2094	ALT 6
2073	ALT I	2084	ALT T	2095	ALT -
2074	ALT J	2085	ALT U		
Misc. Key	Keystroke	Misc. Key	Keystroke	Misc. Key	Keystroke
3001	PA 1	3009	CMD 7	3017	°
3002	PA 2	3010	CMD 8	3018	1/2
3003	CMD 1	3011	CMD 9	3019	¶
3004	CMD 2	3012	CMD 10	3020	§
3005	CMD 3	3013	¥	3021	
3006	CMD 4	3014	£	3022	0/00
3007	CMD 5	3015	¤		
3008	CMD 6	3016	¬		

Table A-4. ASCII Character Set (Continued)

PF Keys	Keystroke	PF Keys	Keystroke	PF Keys	Keystroke
4001	PF 1	4009	PF 9	4017	PF 17
4002	PF 2	4010	PF 10	4018	PF 18
4003	PF 3	4011	PF 11	4019	PF 19
4004	PF 4	4012	PF 12	4020	PF 20
4005	PF 5	4013	PF 13	4021	PF 21
4006	PF 6	4014	PF 14	4022	PF 22
4007	PF 7	4015	PF 15	4023	PF 23
4008	PF 8	4016	PF 16	4024	PF 24
F Keys	Keystroke	F Keys	Keystroke	F Keys	Keystroke
5001	F 1	5014	F 14	5027	F 27
5002	F 2	5015	F 15	5028	F 28
5003	F 3	5016	F 16	5029	F 29
5004	F 4	5017	F 17	5030	F 30
5005	F 5	5018	F 18	5031	F 31
5006	F 6	5019	F 19	5032	F 32
5007	F 7	5020	F 20	5033	F 33
5008	F 8	5021	F 21	5034	F 34
5009	F 9	5022	F 22	5035	F 35
5010	F 10	5023	F 23	5036	F 36
5011	F 11	5024	F 24	5037	F 37
5012	F 12	5025	F 25	5038	F 38
5013	F 13	5026	F 26	5039	F 39



Table A-4. ASCII Character Set (Continued)

Numeric Keypad	Keystroke	Numeric Keypad	Keystroke	Numeric Keypad	Keystroke
6042	*	6049	1	6056	8
6043	+	6050	2	6057	9
6044	Undefined	6051	3	6058	Enter
6045	-	6062	4	6059	Num Lock
6046	.	6063	5	6060	00
6047	/	6064	6		
6048	0	6065	7		
Extended Keypad	Keystroke	Extended Keypad	Keystroke	Extended Keypad	Keystroke
7001	Break	7008	Backspace	7015	Up Arrow
7002	Delete	7009	Tab	7016	Dn Arrow
7003	Pg Up	7010	Print Screen	7017	Left Arrow
7004	End	7011	Insert	7018	Right Arrow
7005	Pg Dn	7012	Home	7019	Back Tab
7006	Pause	7013	Enter		
7007	Scroll Lock	7014	Escape		



Index

A

- AIM code identifiers A-4
- ASCII character set A-9

B

- beeper 1-3, 3-5
 - beep after decode 5-66
 - frequency 5-59
 - indications 3-6
 - successful read 3-5
 - volume 3-5, 5-57

C

- cables
 - interface 2-3
 - modular connector 2-2
 - scanner cable 2-1
 - switching 2-2
- cancel bar code 5-143
- cleaning 4-1
- CLSI editing 5-124
- code ID characters
 - AIM A-4
 - Symbol 5-129

- connecting to host 2-3

D

- default table 5-2
- defaults 5-2
 - setting 5-10

H

- hand-held mode 3-1
- hardware handshaking ... 5-27
- host
 - IBM 46XX 5-11
 - RS-232C 5-13
 - selecting 5-2

I

- IBM 468X/9X
 - EAS support 1-2
 - overview 1-2
- information, service xi

L

- LED 1-3



LS 6000i Series Product Reference Guide

indications3-7

M

maintenance4-1

N

notational conventions x

NOTIS editing5-125

numeric bar codes5-138

P

parameters, operational5-1

power options2-3

power supply

connecting2-3

powering scanner1-3

prefix/suffix5-133

product overview1-1

programming bar codes

RSS-145-126

RSS-Expanded5-128

RSS-Limited5-127

USB parameters5-41

CAPS LOCK5-52

country selection5-45

ignore unknown

characters5-53

keystroke delay5-51

set defaults5-41

USB device type5-41

programming parameters5-1

ASCII format5-38

baud rate5-19

beep after good decode 5-66

beep on bel5-39

beeper frequency5-59

beeper volume5-57

bookland EAN5-75

cancel5-143

check receive errors ..5-26

CLSI editing5-124

codabar5-120

codabar lengths5-121

code 1285-98

code 128 decode

performance ...5-99

code 395-102

code 39 check digit

verification ...5-106

code 39 decode performance

.....5-108

code 39 full ASCII ...5-110

code 39 lengths5-103

convert I 2 of 5 to

EAN-135-119

convert UPC-E to

UPC-A5-86

defaults5-2

EAN zero extend5-87

EAN-135-74

EAN-85-73

hardware handshaking .5-27

host serial response

timeout5-35

host types5-11

I 2 of 5 check digit verification

.....5-116

I 2 of 5 lengths5-113

intercharacter delay ..5-40

- interleaved 2 of 5 5-112
 - laser on time 5-63
 - linear code type security level
 5-67
 - linear supplemental
 decode 5-94
 - linear UPC/EAN decode 5-93
 - NOTIS editing 5-125
 - numeric bar codes . . . 5-138
 - parity 5-23, 5-24
 - pause duration 5-132
 - prefix/suffix values . . . 5-133
 - random weight check
 digit 5-81
 - RTS line state 5-36
 - scan data transmission
 format . 5-134, 5-135
 - set defaults 5-10
 - sleep mode time-out . . 5-64
 - software handshaking . 5-31
 - stop bits 5-37
 - time to return to continuous
 omni 5-56
 - time-out between decodes,
 different symbols 5-62
 - time-out between decodes,
 same symbol . . . 5-61
 - transmit code 39 check
 digit 5-107
 - transmit code ID character
 5-129
 - transmit l 2 of 5 check
 digit 5-118
 - trigger modes 5-54
 - UCC/EAN-128 5-101
 - UPC-A 5-72
 - UPC-A check digit 5-79
 - UPC-A preamble 5-82
 - UPC-E 5-71
 - UPC-E check digit 5-80
 - UPC-E preamble 5-84
 - UPC-E/UPC-A supp
 redundancy 5-78
 - UPC/EAN coupon code 5-97
 - UPC/EAN decode
 performance . . . 5-95
 - UPC/EAN predecode
 block 5-88
 - UPC/EAN security level 5-90
 - UPC/EAN supplemental
 redundancy 5-78
 - UPC/EAN supplementals
 5-76
 - programming scanner 2-4
- R**
- related publications x
 - RS-232
 - ASCII format 5-38
 - baud rate 5-19
 - beep on bel 5-39
 - check receive errors . . . 5-26
 - EAS support 1-2
 - hardware handshaking . 5-27
 - host serial response
 timeout 5-35
 - hosts 5-13
 - intercharacter delay . . . 5-40
 - overview 1-1
 - parity 5-23, 5-24
 - RTS line state 5-36



LS 6000i Series Product Reference Guide

software handshaking . . .5-31
stop bits5-37

S

scan pattern
 omnidirectional3-1, 4-2
scan zone4-2
scanner dimensions4-4
scanning
 hand-held mode3-1
 scan zone4-2
 scanning modes3-1
scanning modes
 combination3-1
 triggered omnidirectional .3-1
 triggered single scan line .3-2
service informationxi
setup2-1
 connecting interface
 cable2-3
 connecting power supply .2-3
 connecting to host2-3
 installing scanner cable . .2-1

programming the scanner
 2-4
switching cables2-2
unpacking2-1
sleep mode1-3
software handshaking5-31
specifications4-3
 scan zone4-2
symbol support centerxii
Synapse "Smart Cables" . . .1-2

T

technical specifications4-3
trigger modes5-54
triggering3-1
troubleshooting4-5

U

UCC/EAN-128A-1
unpacking2-1

W

warrantyxvi

Tell Us What You Think...

We'd like to know what you think about this Manual. Please take a moment to fill out this questionnaire and fax this form to: (516) 738-3318, or mail to:

Symbol Technologies, Inc.
One Symbol Plaza M/S B-4
Holtsville, NY 11742-1300
Attn: Technical Publications Manager

IMPORTANT: If you need product support, please call the appropriate customer support number provided. Unfortunately, we cannot provide customer support at the fax number above.

User's Manual Title:

(please include revision level)

How familiar were you with this product before using this manual?

Very familiar Slightly familiar Not at all familiar

Did this manual meet your needs? If not, please explain.

What topics need to be added to the index?, if applicable

What topics do you feel need to be better discussed? Please be specific.

What can we do to further improve our manuals? _____

Thank you for your input—We value your comments.



72-51596-01
Revision A — July 2001

Symbol Technologies, Inc. One Symbol Plaza Holtsville,
New York 11742-1300